


# NATURAL GRAIN


**SEMCO**  
modern seamless surface

## APPLICATION IN 3 EASY STEPS

### STEP 1 - PREPARATION OF EXISTING SUBSTRATE

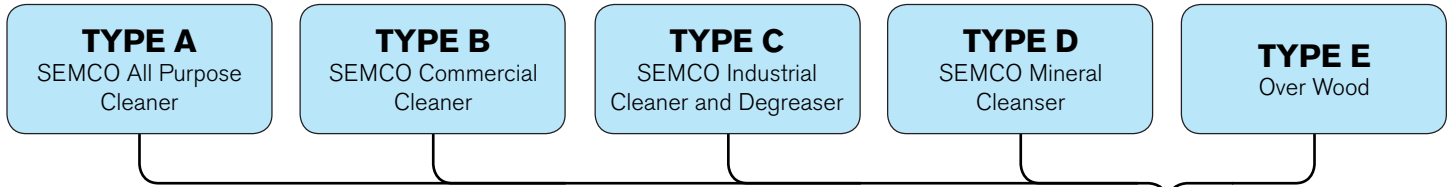

### STEP 2 - X-BOND SEAMLESS STONE

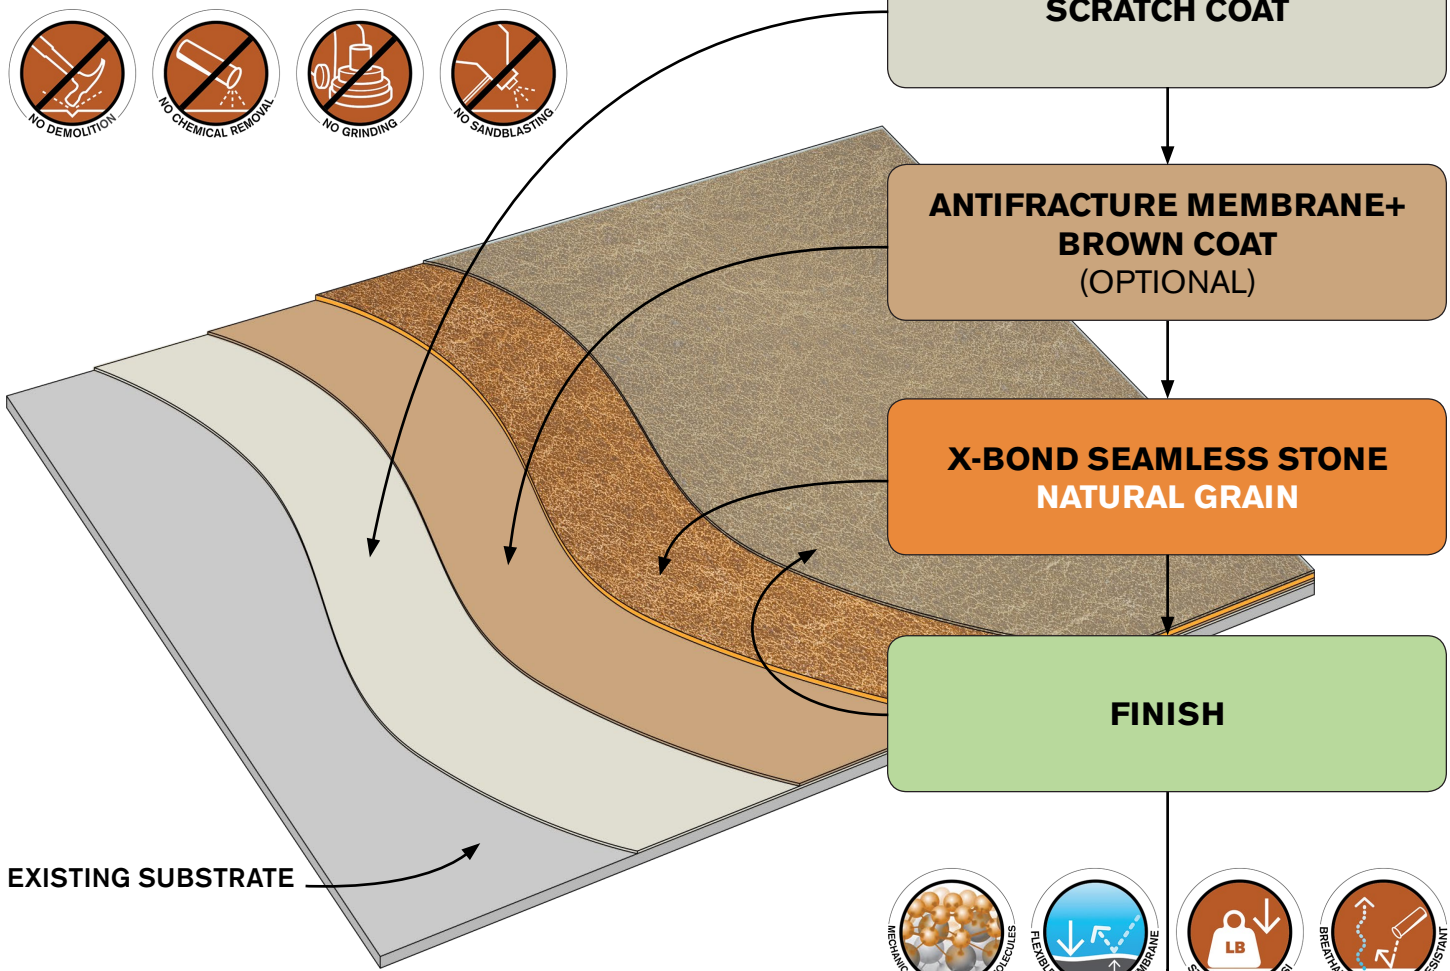

### STEP 3 - FINISHING

