






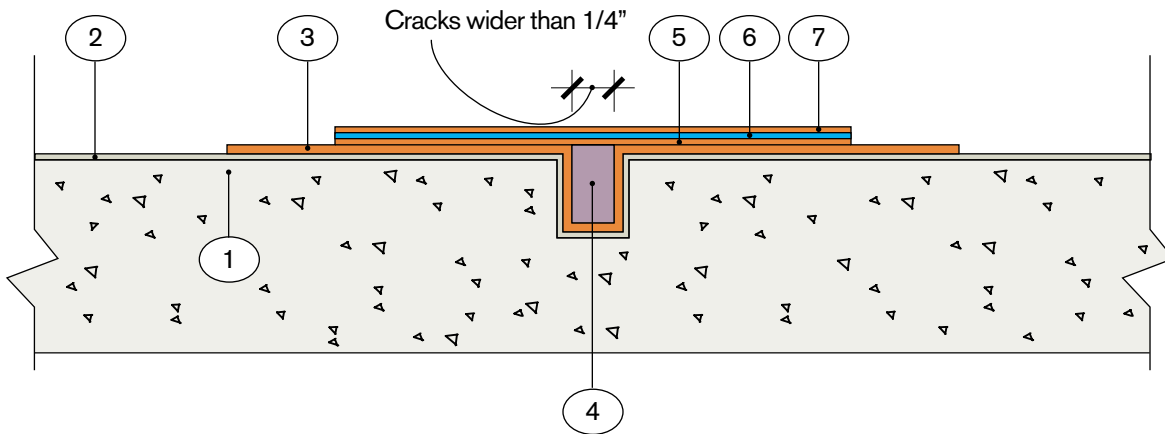


CRACKS & CONTROL JOINTS

Liquid Membrane over cracks wider than 1/4"

CAUTION! Reopen exterior control joints - 1/4" wide and 1/4" deep.



-  1. Existing substrate - concrete
-  2. Scratch Coat
-  3. Liquid Membrane, apply 2 coats (40 mils)
-  4. Fill cracks with X-Bond Brown Coat:
1 part of X-Bond Liquid to 1 part of X-Bond Additive to 2 1/2 parts of X-Bond Stone
-  5. Liquid Membrane, 1st coat
-  6. Fabric reinforcement, while Liquid Membrane is still wet, embed fabric reinforcement into it
-  7. Liquid Membrane, apply 2nd coat over embedded fabric reinforcement immediately



FLOORS | WALLS | POOL DECKS | WATERPROOFING
REDEFINING THE ART OF SURFACE CREATIVITY FOR OVER 25 YEARS USING GREEN MATERIALS