



# SHOWER DETAIL

## X-Bond over concrete or construction boards/panels

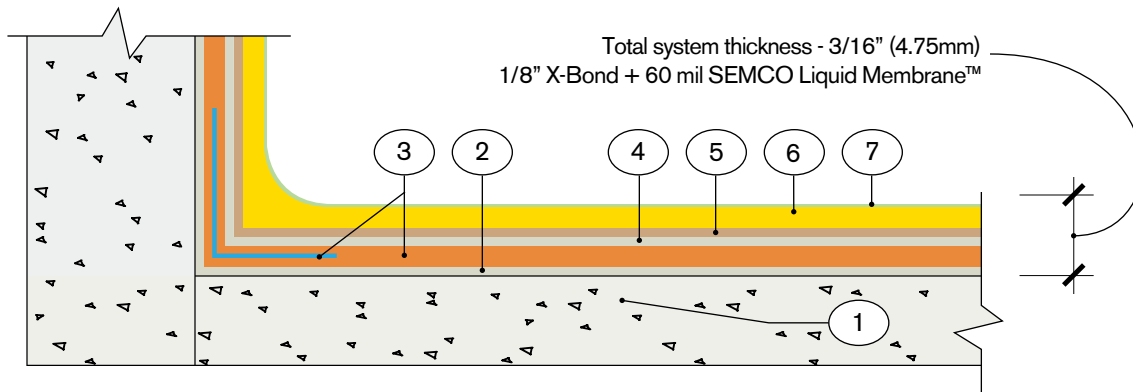

- 1. Existing substrate - concrete or construction boards/panels
- 2. Scratch Coat
- 3. SEMCO Liquid Membrane™ (Fabric Reinforcement at joints and inside corners)
- 4. Scratch Coat
- 5. Brown Coat (optional build)
- 6. X-Bond Seamless Stone
- 7. Satin Stone or Titan Shield Gloss  
\*Xtra Gloss for steam showers

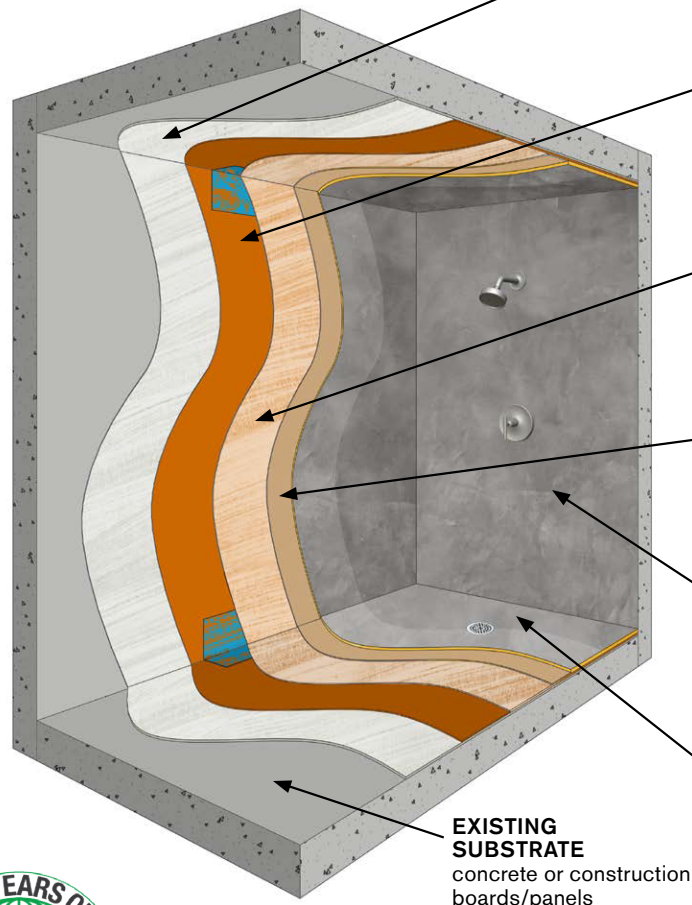

### SCRATCH COAT

**SEMCO LIQUID MEMBRANE™**  
with Fabric Reinforcement

### SCRATCH COAT

**BROWN COAT**  
optional build

**X-BOND SEAMLESS STONE**

### FINISH

Satin Stone or Titan Shield Gloss  
\*Xtra Gloss for steam showers



**FLOORS | WALLS | POOL DECKS | WATERPROOFING**  
REDEFINING THE ART OF SURFACE CREATIVITY FOR OVER 25 YEARS USING GREEN MATERIALS

