






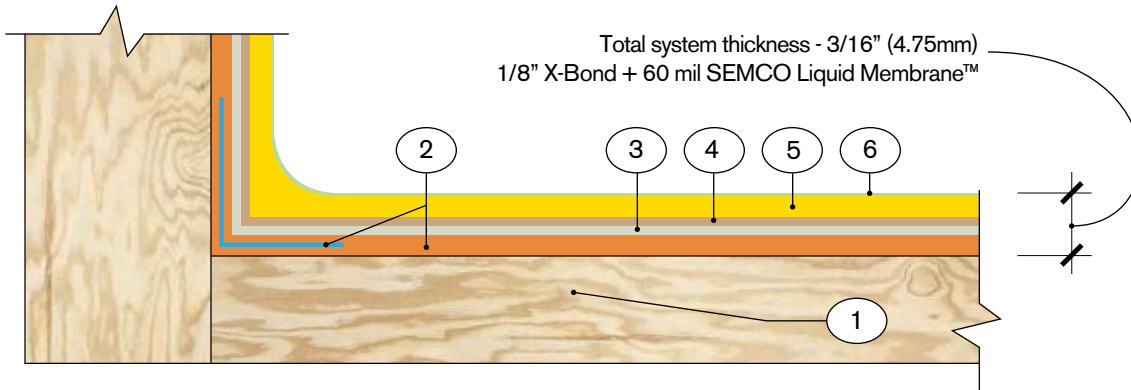


SHOWER DETAIL

X-Bond over wood (plywood and/or OSB boards)



-  1. Existing substrate - wood (plywood and/or OSB boards)
-  2. SEMCO Liquid Membrane™ (Fabric Reinforcement at joints and inside corners)
-  3. Scratch Coat
-  4. Brown Coat (optional build)
-  5. X-Bond Seamless Stone
-  6. Satin Stone or Titan Shield Gloss
*Xtra Gloss for steam showers

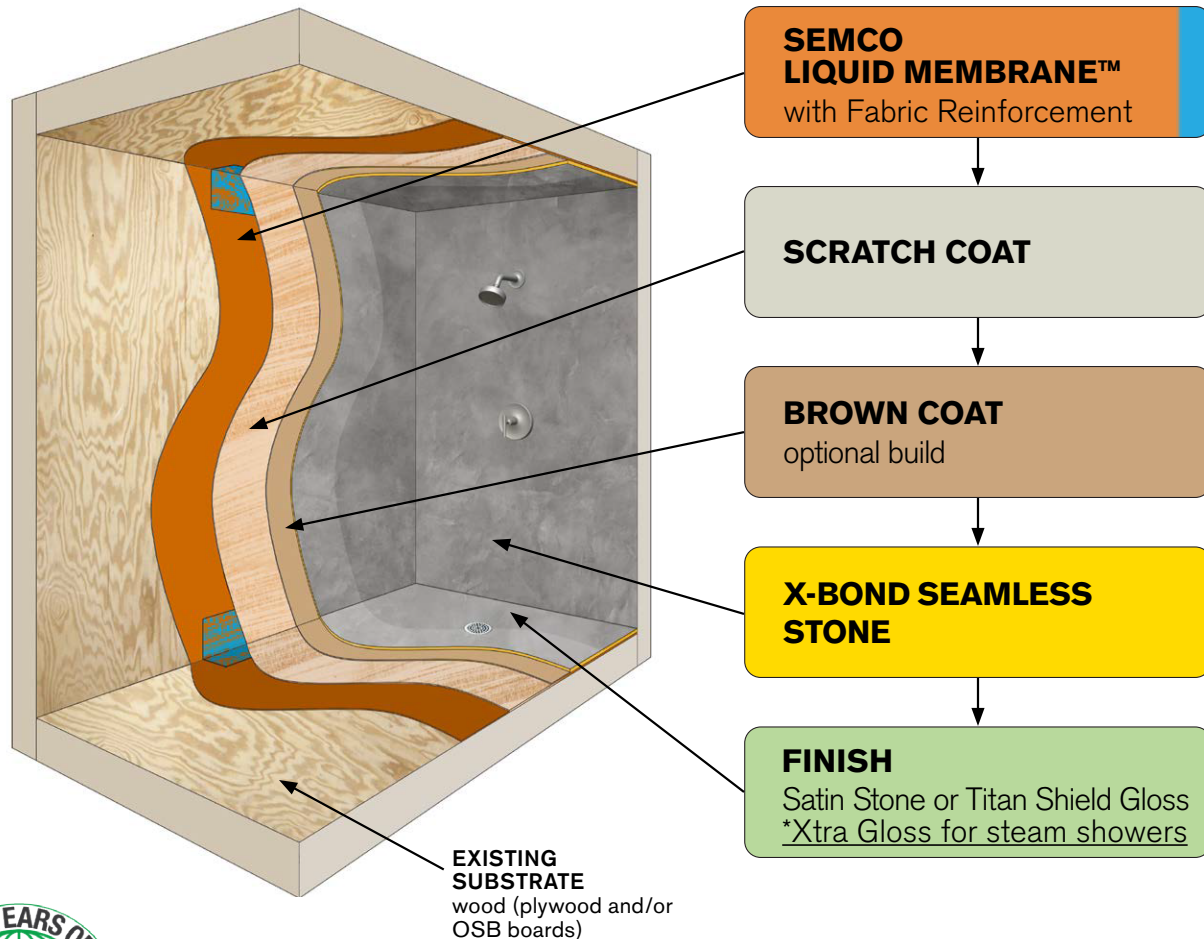

FLOORS | WALLS | POOL DECKS | WATERPROOFING
 REDEFINING THE ART OF SURFACE CREATIVITY FOR OVER 25 YEARS USING GREEN MATERIALS

