


X-BOND ADA BROADCAST SYSTEM


SEMCO
modern seamless surface

APPLICATION IN 3 EASY STEPS

STEP 1 - PREPARATION OF EXISTING SUBSTRATE

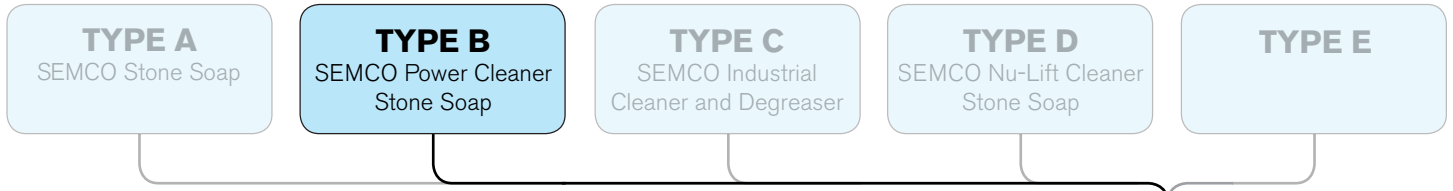

STEP 2 - X-BOND SEAMLESS STONE

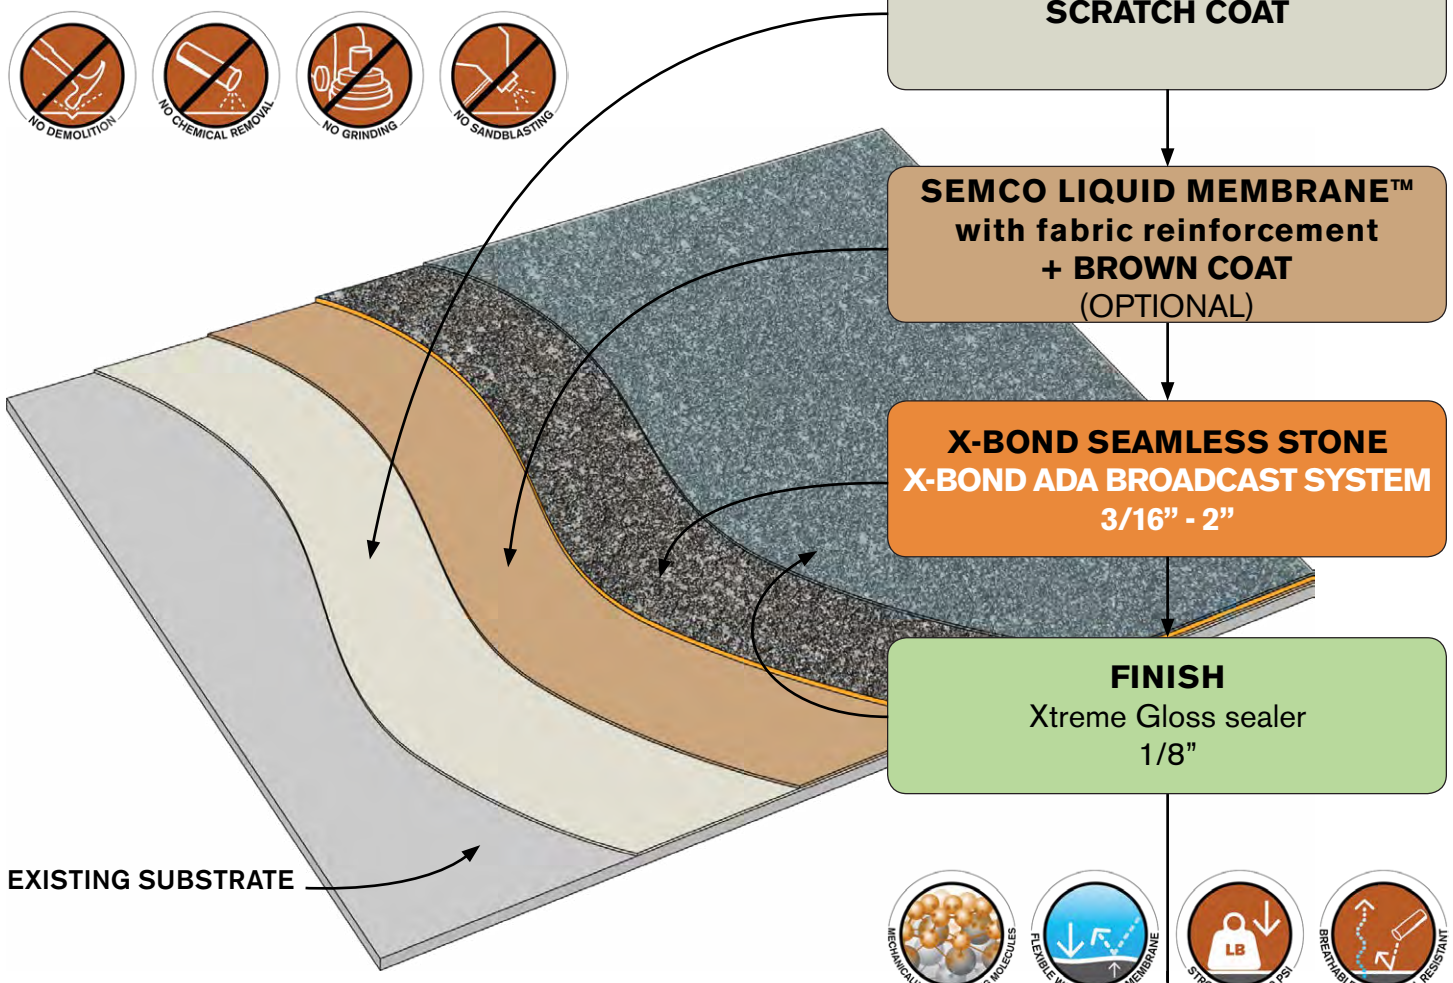

STEP 3 - FINISHING

